

# THE PARAMOUNT ZOOM H1N USER GUIDE

Power Switch

Memory Card

Microphone Input



Headphone Input

Headphone Volume

\*This is not your  
Recording Level

Microphone Recording  
Level Adjustment

Microphone Level  
\*Keep levels just left of -6  
\*\*Do Not hit 0

Record Button



\*Do not forget to mark  
your audio & video with  
a clap or slate while  
recording