

THE PARAMOUNT ZOOM H1N USER GUIDE

Power Switch

Memory Card

Microphone Input



Headphone Input

Headphone Volume

*This is not your
Recording Level

Microphone Recording
Level Adjustment

Microphone Level
*Keep levels just above -6
Don't Hit 0

Record Button



*Do not forget to mark
your audio & video with
a clap or slate while
recording